APPENDIX 7-R-3

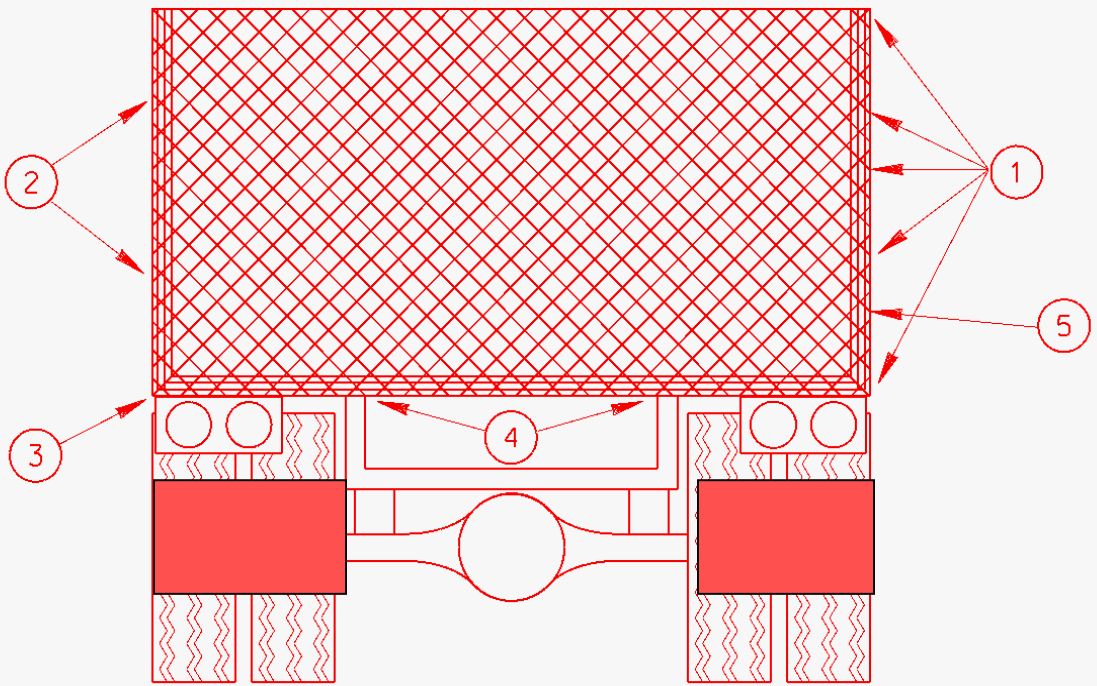

TAILGATE FENCING

1. ATTACH FENCING PERMANENTLY TO ONE SIDE OF TRUCK BED
2. AFTER LOADING, TIE FENCING TO OTHER SIDE OF TRUCK BED AT TWO PLACES WITH HEAVY GAUGE WIRE
3. FENCING MUST EXTEND TO BOTTOM OF BED
4. AFTER LOADING, BOTTOM OF FENCING SHALL BE TIGHT AGAINST THE BED OF THE TRUCK AND SECURED AT A MINIMUM OF TWO LOCATIONS
5. USE SOLID IRON METAL BARS ON TWO SIDES OF THE FENCING